

BLOTSDV

Thermostatic Blower Installation

These are contractor kits with limited instructions; please refer to the owner's manual for additional instructions.

BEFORE INSTALLING BLOWER

Always turn off the gas supply and allow the unit to cool down before proceeding.


INSTALLING BLOWER

Two Velcro strips are supplied to secure each blower to the firebox wall and two magnetic strips are supplied to secure each blower to the firebox floor. Remove the tape from the back of the Velcro pads and position the blowers inside the lower access compartment. Blowers can slide in through the lower access door on either side of the valve and mount flat against the back of the firebox wall. Blowers should be installed with the air discharge facing upwards, pointing up under each blower channel.

Position the thermodisk with mounting bracket and magnet to the top of the blower compartment. The variable speed control stays behind the lower access panel door and mounts to the bottom pan. (Self-adhesive) Some models may allow for alternate mounting through the lower access door.

Because the blowers are heat activated, it can take 10-45 minutes after lighting the fireplace for the blowers to start running. The blowers will continue to run after the fireplace has been turned off for another 20-40 minutes until the thermodisk cools to 90F.

BLOTSDV AUTOMATIC THERMOSTAT BLOWER

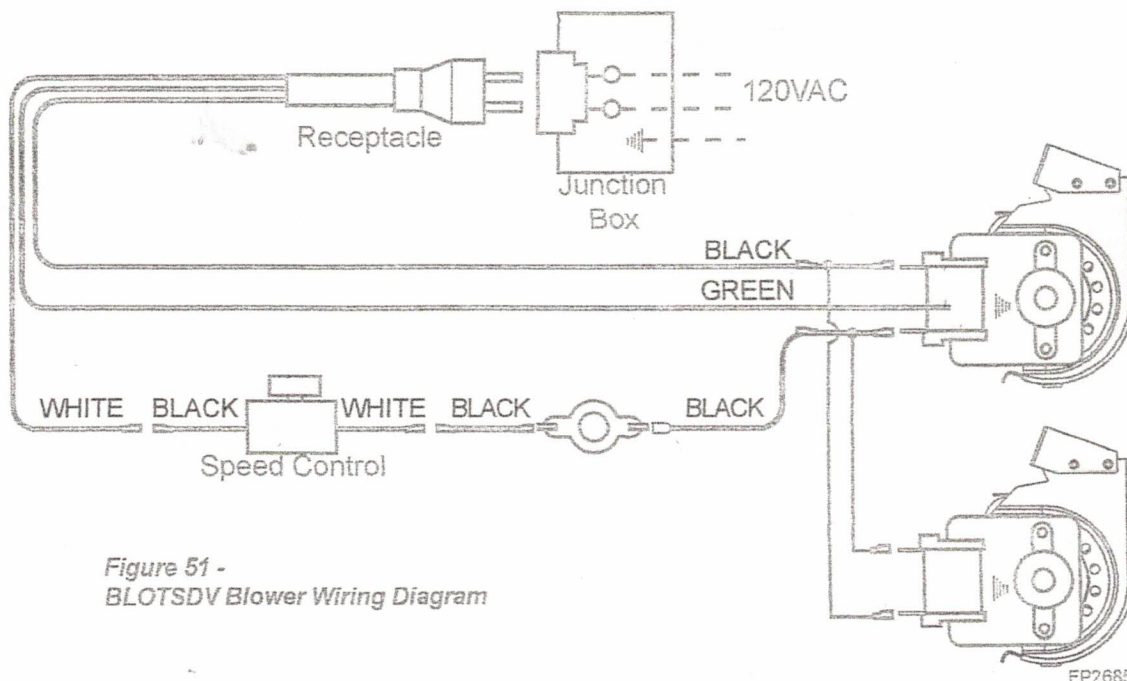

Before installing the blower, wire the receptacle into an electrical circuit. This should be done before framing the fireplace. Wire with minimum 60° C wire in accordance with prevailing codes.